


# Spin Lock Stopper™ (S.L.S)



Locking the S.L.S

- 1 Push on the blue wheel
- 2 Move stopper up ( toward, power strap)

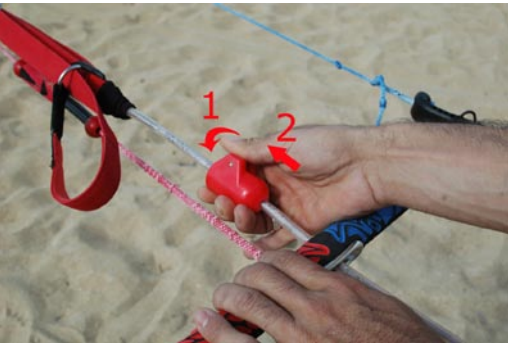

Unlocking the S.L.S

Pull toward you

## Liabilite:

The S.L.S is designed for your safety and self release when bar pressure is too strong. The factory setting is on hole number 1 ( as in picture below) Changing to full lock position, hole number 2, will not allow the S.L.S to release the kite power automatically.

S.L.S option:

Your Spin Lock Stopper™ can be set on:

- 1-auto release ( axle in hole 1 on the blue wheel)
- 2-complete lock (axle in hole 2 on the blue wheel)

Both allow to adjust the position of the S.L.S on the center line.



The S.L.S is made of Polyurethane, which is a high resistance material